RAMP METERING PROCEDURE MANUAL ADDENDUM

STATE OF CALIFORNIA Governor Arnold Schwarzenegger

BUSINESS, TRANSPORTATION AND HOUSING AGENCY Secretary Sunne Wright McPeak

DEPARTMENT OF TRANSPORTATION Director Will Kempton

DISTRICT 7
DIVISION OF OPERATIONS
OFFICE OF FREEWAY OPERATIONS

JUNE 2005









STATE OF CALIFORNIA BUSINESS, TRANSPORTATION AND HOUSING AGENCY DEPARTMENT OF TRANSPORTATION DISTRICT 7 DIVISION OF OPERATIONS

RAMP METERING

PROCEDURE MANUAL ADDENDUM



DEPARTMENT OF TRANSPORTATION
DISTRICT 7



DOUG FAILINGDISTRICT DIRECTOR

FRANK QUON
DEPUTY DISTRICT DIRECTOR OF OPERATIONS

MARCO RUANO
OFFICE CHIEF, OFFICE OF FREEWAY OPERATIONS

AFSANEH RAZAVI BRANCH CHIEF, RAMP METERING BRANCH

JUNE 2005

FOREWORD

Enclosed is an Addendum to District 7 RAMP METERING PROCEDURE MANUAL (RMPM) of 2002. This document was prepared to update ATTACHMENT A and APPENDIX B, which describes the latest SATMS* ramp metering software.

In 2002, when the RMPM was issued, the SATMS software was under development (interim version) and was known as SATMS 2.3. The latest and final version is SATMS 3, which is included in this Addendum.

^{*} SATMS is an acronym for Semi Automatic Traffic Management System

ATTACHMENT A

• <u>RAM MAP</u> (Page "00XY" & TOD Table)

- LOOP DETECTOR SENSOR LAYOUT SHEET
 - AS-BUILTS PLAN

Notes:

- Ramp Metering personnel are **responsible** for the creation, placement and up-keep of these documents (RAM MAP, Loop Detector Sensor Layout Sheet and As-Built plans).
- These documents **must be placed inside every** RMS and VDS cabinet in the District.

SATMS 3.0 RAM Page 0

Date

1/18/2007

Ro	ute	1	05	Dire	ection	W	/B		P.M.	R3	.30		Loc	cation	PRAIRIE / IMPERIAL HWY					
E.	No	E 4	808	Lo	c. No.	18	808	Lir	ne No.	33		C	ontroll	er No.	Engineer RAFAEL E		AFAEL BENIT	ΓEZ		
	0	1	2	3	4	5	6	7	8	9	P	A	В	С	D	Е	F		"BITS" or "FLA	AGS"
	GETADD	<u> </u>	DATA	CHARCT	SCTML1	TEMP00	CYLEN	RXSTST	CONT ID	FMNL	HOL		CFTRR	TBCNT2	DATA0A	DATA1A	STATUS			
0		} 			} 		 - -		03	255	0	0				} ! !		0		
	"+1"	 	BLKOUT	SPCOUT	SCTML2	TEMP01	DCNTR	TXSTAT	FIRGR	FLSHR			Q1CYTMR	ACKFLG	DATA0B	DATA1B	SIGMSK			
1		i ! !			<u> </u>		i ! !		60.0	00						i ! !	0 0	1		
	PUTADD		PGADD	MODE	SCTML3	TEMP02	PCNTR	TXINIT	PLTYEL	LASTGR				ETBFLG	DATA0C	DATA1C	QFLAG			
2		<u> </u>					: 		0.0	60						: :		2		
	"+1"	 	WDADD	CHARIN	SCTML4	TEMP03	YCNTR	INCTR	LNGYEL	PHYSML			GOODML	PADFLG	DATA0D	DATA1D	QSTAT			
3		<u> </u> 					<u> </u> 		3.0	03						<u> </u> 		3		
	EXINDX		D1	LASTCB	SCTML5	TEMP04	DLETM	BTCK		PHYSOP			GOODOS	CARCT1	DETINA	STCHGA	COMM1			
4		i ! !			<u> </u>		i ! !			00						i ! !	0 F	4	1 2 3 4	
	"+1"	<u> </u> 	D2	TIMEFX	SCTML6	TEMP05	PLETM	TRCODE	QTHRS	Q2THRS			RLPSEL	SPRCNT	DETINB	STCHGB	COMM2			
5		! ! !			! !		! !		2.0	0.0			,	! !		! !	0 4	5	3	
	HZ30	! !	D3	HR	SCTOS1	TEMP06	GRNTMR	ССНК	MXGRNA	QON			MAXRATE	ACKMEM	DETINC	STCHGC	DTCTRA			
6		i ! !	İ		į		i ! !		5.0	0.0						i ! !	47	6	1 2 3	7
	HZ30+1		D4	MIN	SCTOS2	TEMP07	QTMR	ХССНК	MXGRNB	Q2ON			QMAXRAT	"+1"	DETIND	STCHGD	DTCTRB			
7		<u> </u>	<u> </u>				<u> </u>		0.0	0.0							0 0	7		
	HZ30+2		D5	SEC	SCTOS3	TEMP08	CNTR	GRFLAG	CROCCA	QOFF				ENDFG1	BLKTMR	ERRORA				
8		! ! !			! !		! !		15.0	0.0				! ! L		00	3 F	8	1 2 3 4 5	6
	HZ30+3	! ! !	D6	YEAR	SCTOS4	TEMP09	TIME	RBPNTR	CROCCB	Q2OFF				ENDFG2	GRNFLG	ERRORB				
9		<u> </u> 			<u> </u> 		i ! !		0.0	0.0			,				11	9	1 5	
	HZ30+4	<u>.</u>	H1	MONTH	SCTOS5	TEMP0A	SOURCE	"+1"	CRVOLA					XMITFG	EXFLAG	ERRORC	ALTDES			
A		<u> </u> 	<u> </u>	<u> </u>	: 		<u> </u>		90				, 	 			<u> </u>	A		
	HZ30+5	<u> </u>	H2	DAOFMO	SCTOS6	TEMP0B	RATE	TBPNT1	CRVOLB	MINGRN				SEND1	TXFLGS	ERRORD	LNDSML			
В		i ! ! !	<u> </u>	<u> </u>	i ! ! !	i 	i ! ! !	i 	00	2.0				i 	i 		0 0	В		
	TMFLAG	i ! !	Н3	DAOFWK	DWNCNT	BITSTR	MXGRN	"+1"	PSELA	CRSPEED				TSTFLG		ERSETA	LNDSOS			
С		! ! ! !	<u> </u>	<u> </u>	! ! !		! !		01	35			 	! ! L			0 0	С		
	BFTMR	!	H4	DIM	TLANES	CYCLY	PSEL	TBCNT1	PSELB	Q1CYGRN					DEFLAG	ERSETB				
D		i L	<u> </u>	<u> </u>	i ! !	 	i L	i L	00	255			 	 	i L		0F	D	1 2 3 4	
	"+1"	<u> </u> 	Н5	SSEC	LNCNT	PCC	CRVOL	TBPNT2	RLANES	Q1MAXSET					STSC	ERSETC	SIGFLG			
Е		} }		<u> </u>	 		 		01	15		,		 			_	Е		
	MONITR		Н6	DAYPTR	WDTGGL	VLTN	CROCC	"+1"	GRNHLD	RATESTP					REFLAG	ERSETD	DPERR			
F					<u> </u>				60	02	0				_	00		F		
	0	1	2	3	4	5	6	7	8	9	ŀ	١	В	С	D	Е	F			

SATMS 3.0 Detector Layout Sheet

Date

1/18/2007

Route	105	Direction	WB	P.M.	R3.30	I	Location		PRAIRIE	E / IMPER	IAL HWY	1
E. No.	E4808	Location No.	1808	Line No.	33	Contr	oller No.	3	Engineer	RAI	FAEL BE	NITEZ
SD1 0F9-1	X	HOV 0F8-6	SD4 0F9-4		CD1 0F8-7		OS3 OF7-3		ML5 0F6-5		ML1 0F6-1	X
Descrp	ML HOV		Descrp		Descrp							
SD2 0F9-2		Q2 0F9-6	HAWTH SD5 0F9-5	X A	CD2 0F7-7		OS4 OF7-4		ML6 0F6-6		ML2 0F6-2	X
Descrp			· -	HAWTHROFF	Descrp							
	SLOT #2	SLOT #4	SL	OT #6	SLOT #	#8	SLC	OT #10	SLO	T #1 <u>2</u>	SL	OT #14
D1 0F8-1	X	Q1 0F8-3	ON1 0F8-4	X	CD ON OF8-8 Descrp		OS1 OF7-1		OS5 0F7-5		ML3 0F6-3	X
P1 0F8-2	X	SD3 0F9-3	PRAIRIE OFF1 0F8-5	AVE OFF	CD OFF 0F7-8		OS2 OF7-2		OS6 0F7-6		ML4 0F6-4	
		Descrp			Descrp							
	SLOT #1	SLOT #3		OT #5	SLOT #			OT #9		T #11	SL	OT #13
0F1		e Device 1 e Device 2	0F6 4 7	2 X M	ain Line 1 ain Line 2 ain Line 3	0F8	2 X P	emand assage Queue 1	0FB	2 M	L1 Disabler L2 Disabler L3 Disabler	
0F4	2 X Enabl 3 X Enabl 4 X Enabl 5 Enabl	e Metering e Local Responsive e Q1 Override de Q2 or Super Q1 Over e Independent Q2 IL Speed Before Q-over		5 M 6 M 7 X M	ain Line 4 ain Line 5 ain Line 6 L HOV Flag Fwy Conn Flag	PRAII	- 5 X O 6 X R 7 CI	DN1 DFF1 amp HOV D1		5 M 6 M 7 (N	L4 Disabler L5 Disabler L6 Disabler lot Used) lot Used)	
0D2	7Enabl	e Mag. D & P Lock-in	0D4			0D6						
0F5	2 Devic 3 X "Mete 4 Enab 5 Pre-tim 6 Pre-tim 7 Enable	e 1 Flash e 2 Flash r On" Sign Flash le Load Switch Monitorin e Red (if no Demand Det) e Green (if no Passage Det) Shutdown Top EMS Failure	0 F7	2 O O O O O O O O O O O O O O O O O O O		0F9	3 S 4 S 5 X S 6 Q 7 P	D2 D3 D4 D5 HAWTHROI Dueue 2 Dass Vol Count	0 0	2 O O O O O O O O O O O O O O O O O O O	S1 Disabler S2 Disabler S3 Disabler S4 Disabler S5 Disabler S6 Disabler lot Used)	
0D3	8Enable	Shutdown Bot. EMS Failure	0D5	8 <u> </u>	O OFF	0D7	8 (1	Not Used)		A) 8	lot Used)	

SATMS 3.0 Time-Of-Day Table

33

Route

E. No.

105

E4808

Location No.

1808

Line No.

Direction WB P.M. R3.30 Location PRAIRIE / IMPERIAL HWY

Controller No.


Date

Engineer

1/18/2007

RAFAEL BENITEZ

No. of	f Metered Lai	ne(s)		1					HOV	Lane	YES		
		Platooi	ning F	Plans						С	ritical Volume/O	ccupancy Plans	
		(Colur	nn A C	LR)							(Column	B CLR)	
PSELA	a(\$8C) = 0	1	MAXG	iRNA (\$86) =		5.0		CRV	DLA (\$8A) =	90	CROCCA (\$88) =	15.0
		(Colur	nn A S	ET)							(Column	B SET)	
2SELB	S(\$8D) = 0	0	MAXG	RNB (\$87) =		0.0		CRV	DLB (\$8B) =	00	CROCCB (\$89) =	0.0
INTV	Time of Day	Rates	l		Davs	of the	Week			DEV 1	DEV 2	(A)	(B)
	(Hrs.)	(Veh/Min)	М	Т	W	Th	F	Sa	Su	On	On	Platn	Crvol
01	0530	08	X	X	X	X	X						
02	1400	10	X	X	X	X	X						
03	1930	00	X	X	X	X	X						
04	3333												
05													
06													
07													
80													
09													
10													
11													
12													
13													
14													

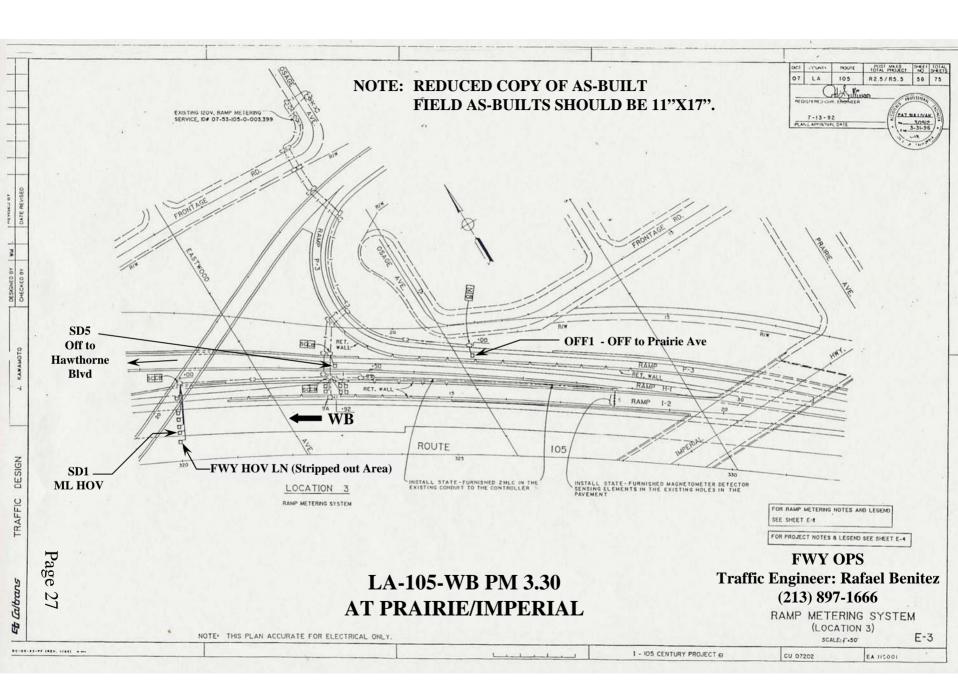

APPENDIX B

SATMS 3 SOFTWARE WORKSHOP NOTES*

^{*}This Appendix is the workshop notes of Mr. Liem Phan, TMC Support.

SATMS-3 Workshop

April 15-17, 2003

Workshop's Objective

 To understand the differences between the original program SATMS-1 and this new program SATMS-3

SATMS-3 Installation Procedure

- 1. Read existing Controller ID which is displayed at address \$280
- 2. Power down the controller
- 3. Install new chip & set the Controller ID on dip-switch
- 4. Power up the Controller: Satms-3 will automatically erase all existing memory
- 5. Verify Software version (\$3E0) and Controller ID (\$280)
- 6. Re-enter Controller ID at \$080. Push 'E' to confirm your entry.
- 7. Setup real time clock and calendar
- 8. Setup T.O.D and Holiday Tables
- 9. Enter values at column 8, 9, and F
- 10. RESET Watch Dog

Note: One should use Field Manual (\$090) to test proper operation of the controller before leaving

SATMS-3 Controller ID & New Chip

EPROM Board

- New chip 27256 at U1
- Controller ID is set at the DIP switch






CPU Board & M170/E Board

- The chip 27256 can also be installed on the CPU board
- And the Controller ID is set at the DIP switch on the M/170E board

SATMS-3 Version 3.0 Software Version Identification

- When Power Up the controller, the software version 3.0 is shown for a brief moment
- Software code can also be read at address \$3E0



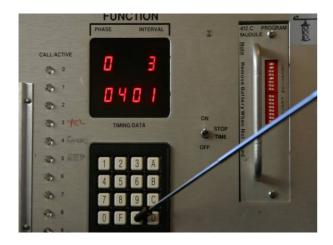

- Each version has a unique released date. SATMS-3 version 3.0 released date is 04-01-03
- To check the date, just press 'E'


SATMS-3 Controller ID – DIP Switch Settings

Controller Number	DIP Switch Settings	Controller Number	DIP Switch Settings
01	1	11	1, 2, 4
02	2	12	3, 4
03	1, 2	13	1, 3, 4
04	3	14	2, 3, 4
05	1, 3	15	1, 2, 3, 4
06	2, 3	16	5
07	1, 2, 3	17	1, 5
08	4	18	2, 5
09	1, 4	19	1, 2, 5
10	2, 4	20	3, 5

SATMS-3

Controller ID: Verification & Confirmation

The Controller ID can be verified at address \$280

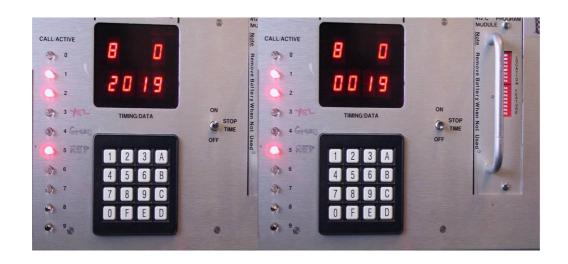

- The same Controller ID must be re-entered at address \$080 for confirmation
- If (080) & (280) do not match, you will see the effect of Rolling Alpha-Numeric

SATMS-3

Start Up & Shut Down	SATMS-3	Vs	SATMS-1
Automatic Start up Sequence	First Green (safety), Green Long Yellow (safety), and Red		N/A
Automatic Shutdown Sequence	Last Green (safety)		N/A

SATMS-3 Automatic Start Up Sequence

- Black Ball : Meter is off
- 2. Green Ball:
 - First Green period: between 60 sec to 255 sec, set at address First Green (FIRGR) \$081
 - Green Hold period: if applicable
 - Green period: a few seconds of green time
- Yellow Ball: duration in one-tenth of a second is set at Long Yellow (LNGYEL) \$083
- 4. Red Ball: waiting for Demand call

SATMS-3 Automatic Shutdown Sequence

- 1. Color Ball: Meter is Operational
- 2. Green Ball: duration in second is set at address Last Green (LASTGR) \$092
- 3. Black Ball: Meter is off

SATMS-3

Automatic Startup & Shutdown Simplify T.O.D. Table

T.O.D. Table - in SATMS-1

INTV	Time of Day	Rates		Days of the Week							
	(Hrs.)	(Veh/Min)	M	Т	W	Th	F	Sa	Su		
01	0500	01	X	X	X	X	X				
02	0501	10	X	X	X	X	X				
03	1900	01	X	X	X	X	X				
04	1901	00	X	X	X	X	X				
05	3333										
06											

SATMS-3 Reduces the Number of Intervals

- 1 minute Green at Start Up is replaced by automatic First Green, maximum 255 second
- I minute Green at Shutdown is replaced by automatic Last Green, maximum 255 second

INTV	Time of Day	Rates		Days of the Week							
	(Hrs.)	(Veh/Min)	M	Ţ	W	Th	F	Sa	Su		
01	0500	01	X	X	X	X	X				
02	0501	10	X	X	X	X	X				
03	1900	01	X	X	X	X	X				
04	1901	00	X	X	X	X	X				
05	3333										
06											

SATMS-3

T.O.D. Table – in SATMS-3

INTV	Time of Day	Rates		Days of the Week							
	(Hrs.)	(Veh/Min)	M	Т	W	Th	F	Sa	Su		
01	0500	10	X	X	X	X	X				
02	1900	00	X	X	X	X	X				
03	3333										
04											
05											
06											

SATMS-3 Traffic Responsive Enhancements

Traffic Responsive Rate	SATMS-3	Vs	SATMS-1
Maximum Rate	Dependent on number of vehicles/green		Independent on number of vehicles/green
TRRATE	Continuously updating status and rate		N/A
Local Speed display	Yes		N/A
Local Occupancy display	Yes		N/A

SATMS-3 RATE – The Metering Rate

- <u>Definition</u>: Metering rate is a total number of Vehicles Per Minute (VPM) that are allowed entering the freeway
- The Metering Rate is entered into the 170 controller by different ways: 1) Manual input,
 2) SWARM, 5) Traffic Responsive, and 6)
 T.O.D. Table
- Every 30 second, the controller selects one of the available rate in the priorities shown in the Rate Hierarchy table

SATMS-3 Rate Hierarchy

- 1. Highest Level 1: Field Manual
- 2. 2nd Level: SWARM rate
- 3. 3rd: PSO (not used)
- 4. 4th: CORM (not used)
- 5. 5th: Traffic Responsive Rate
- 6. 6th: T.O.D. Rate

SATMS-3 MAXRATE - The Maximum Metering Rate

- Unlike SATMS-1, the maximum rate under SATMS-3 is tailored to the chart on the right (for 1 lane metering)
- For multiple metering lanes, the Maximum Rate is the rate shown in the table multiplied by the number of metered lane
- When the selected rate is more than MAXRATE - displayed at address \$0B6 - the meter will go to Rest-in-Green

TABLE OF CYCLE LENGTH RELATIVE TO VOLUME OF TRAFFIC

VEH PER GREEN	CYCLE LENGTH (SEC)	RED TIME (SEC)	VEH PER MINUTE	VEH PER 5 MIN.	VEH PER 15 MIN.	VEH PER HOUR (VPH
1	20.0	18.0	3	15	45	180
1	15.0	13.0	4	20	60	240
1	12.0	10.0	5	25	75	300
1	10.0	8.0	6	30	90	360
1	8.6	6.6	7	35	105	420
1	7.5	5.5	8	40	120	480
1	6.7	4.7	9	45	135	540
1	6.0	4.0	10	50	150	600
1.	5.5	3.5	11	55	165	660
1	5.0	3.0	12	60	180	720
1	4.6	2.6	13	65	195	780
1	4.3	2.3	14	70	210	840
1	4.0	2.0	15	75	225	900
2	15.0	11.0	8	40	120	480
2	13.3	9.3	9	45	135	540
2	12.0	8.0	10	50	150	600
2	10.9	6.9	11	55	165	660
2	10.0	6.0	12	60	180	720
2	9.2	5.2	13	65	195	780
2.	8.6	4.6	14	70	210	840
2	8.0	4.0	15	75	225	900
2	7.5	3.5	16	80	240	960
2	7.1	3.1	17	85	255	1020
2	6.7	2.7	18	90	270	1080
2	6.3	2.3	19	95	285	1140
2	6.0	2.0	20	100	300	1200
3	13.8	7.8	13	65	195	780
3	12.9	6.9	14	70	210	840
. 3	12.0	6.0	15	75	225	900
3	11.3	5.3	16	80	240	960
3	10.6	4.6	17	85	255	1020
3	10.0	4.0	18	90	270	1080
3	9.5	3.5	19	95	285	1140
3	9.0	3.0	20	100	300	1200
3	8.6	2.6	21	105	315	1260
3	8.2	2.2	22	110	330	1320
3	7.8	1.8	23	115	345	1380

SATMS-3 TODRATE - Time-Of-Day Metering Rate

- This is the lowest-priority rate; Hence, it is the "fall-back" rate
- The program reads TODRATE from the T.O.D. Table

SATMS-3 Traffic Responsive Rate (TRRATE)

1. Enable TRRATE: set bit 2 of \$0F4



- Enter the desired Critical Occupancy at \$088
- 3. Enter the desired Critical Volume at \$08A





SATMS-3 TRRATE - Traffic Responsive Metering Rate

 When the mainline volume and occupancy are both less than the desired Critical Volume AND Critical Occupancy, the controller recommends its own rate TRRATE

- If TRRATE < TODRATE : Use TODRATE
- If TRRATE > TODRATE : Use TRRATE
- If TRRATE > MAXRATE : Rest-in-Green

SATMS-3 Traffic Responsive Rate (TRRATE)

 With SATMS-3, TRRATE is continuously calculated every 30 seconds, and displayed at address TRRATE \$3D7



SATMS-3 Local Speed and Occupancy

- Estimated speed on Mainline, Opposite Side, and HOV Ramp are available:
 - \$357 ;Average 3 Min per lane (MPH) on Mainline
 - \$358 ;Average 3 Min per lane (MPH) on Opposite Side
 - \$359 ;Average 3 Min per lane (MPH) on HOV Ramp
- Estimate Occupancy can also be read (in %):
 - \$354 ;Average 1 minute occ mainline in percent (%)
 - \$355 ;Average 1 minute occ opposite side (%)
 - \$356 ;Average 1 minute occ HOV metering lane (%)

SATMS-3 Queue Override Enhancements

Queue-Overrides	SATMS-3	Vs	SATMS-1
Number of Queue	Q1 and Q2 to handle Connector Metering		Q1 only
Queue 1 activated	Can be set for No Action or gradullay increment to Maximum Queue Rate or go dorectly to Rest-In-Green		Cycle Length = 4 seconds regardless of no. of platoon
Q2 activate	Rest-in-Green		N/A
Freeway priority	Yes (cancel Queue if MainLine Speed is low)		N/A
Surface street priority	Yes (rest-in-green if Queue continuously activated for a long time)		N/A
Queue Rate Priority level	Two levels: higher or lower than SWARM		One level only

SATMS-3 Q1 Override

Gradually raise the existing rate to its maximum

- Enable Q1, and set Q1-Override level
 - Lower than SWARM, set bit 3 of \$0F4




- Higher than SWARM, set both bit 3 and 4



SATMS-3 Q1 Override

Gradually raise the existing rate to its maximum

2. Enter Q1 Threshold level at \$085

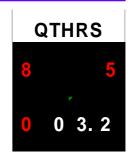

Enter the desired maximum Q1 rate at \$09E (must be less than or equal to the MAXRATE)



4. Enter the step value called Rate Step or RATESTP \$09F



SATMS-3 Q1 Override

Can be set for NO action, or LIMITED action

2. Big Threshold Level at \$085

Small Maximum Q1

Q1MAXSET 9 E

4. Zero Rate Step

SATMS-3 Q1 Override

Can be set for Rest-in-Green

- When Q1 reach its maximum
- And continuously stay at the maximum
- For X number of cycle (each cycle is 30 seconds) set at address \$09D



Q1 goes to Green Ball - Surface Street Priority

SATMS-3 Q2 Override

Rest-in-Green

1. Enable Q2, set both bit 3,4 of \$0F4




2. For Independent Q2, bit 5 must also be set



SATMS-3 Q2 Override

Rest-in-Green

3. Enter Q2 Threshold level at \$095

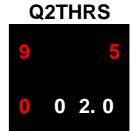

SATMS-3 Q2 Override, Dependent on Q1

When Q2 is activated, and:

If Q1 has not been activated:
 False Q2 activation – No action

 If Q1 is currently ON: Signal goes to Rest-in-Green




SATMS-3 Q2 Override, Independent of Q1

- Don't care Q1 status
- When Q2 is ON, meter is Rest-in-Green

SATMS-3 Queue Override – Freeway Priority

 Cancel Queue Override when mainline speed is less than the Critical Speed (CRSPEED) set at address \$09C:

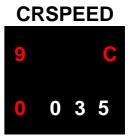

- If Queue Overrides have not been activated: they won't be turned ON
- When queue canceled, the meter goes back to normal rate

SATMS-3 Q-Overrides – Rate Hierarchy

Highest Level 1: Field Manual

Q2 or Super Q1-Override

2nd Level: SWARM rate

• 3rd : PSO

• 4th : CORM

Q1-Override

• 5th: Traffic Responsive Rate


• 6th : T.O.D. Rate

SATMS-3 Safety Enhancements

Safety Enhancement	SATMS-3 Vs	SATMS-1
Load Switch Failure Detection	Yes	N/A
EMS Failure Detection	Yes	N/A
Check for appropriate values	Yes	N/A

SATMS-3 Load Switch Failure Detection

- In the absence of 120 VAC to power the EMS, Shutdown Sequence will start immediately
- All entries at \$0F4 are cleared. The only way to resume metering is to reprogram \$0F4

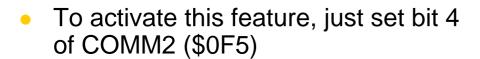

 Make sure this bit is CLEAR for normal ramp metering.



SATMS-3 EMS Failure Detection

- Light bulbs for EMS are continuously monitored during metering. Shutdown sequence will start immediately upon detection of bulb failure
 - To monitor Top part of EMS, set bit 7 of \$0F5
 - To monitor Bottom part of EMS, set bit 8 of \$0F5
- All entries at \$0F4 are cleared. The only way to resume metering is to reprogram \$0F4

SATMS-3 Other Enhancements

Enhancements	SATMS-3 Vs	SATMS-1
Communication Failure (CF) during SWARM	5 minutes extension of SWARM rate	Immediate reversion to TOD rate
Magnetometer Demand Loop Lock-On	Capable to fix this problem	N/A
Minimum Green	Settable	Fixed at 2.0 second
T.O.D table	16 interval	64 interval
Holiday table	8 holidays	16 holidays
LEDs used to indicate signal head color	Yes	No

SATMS-3 Magnetometer Demand Loop

- Problem 1: Magnetometers sometimes provide only a 'spike' reading when a vehicle is present
- Problem 2: Magnetometers also may provide a continuous reading or 'lock up' high

 SATMS-3 can help solve these two problems by setting bit 5 of COMM1 (\$0F4)



SATMS-3 L.E.D. Display

LED Signal Color

2 Last Green

3 Yellow

4 Green

Red

7 First Green



SATMS-3 Ram Map – Column 8

CTRL-ID 8 0 0 0 1 9 FIRGR

ID Confirmation.
This no must be mate

This no. must be matched with actual controler ID set at the DIP switch

8 10 1 2 0

FIRST GREEN
The very First Green after
Black.

60 sec min; 255 sec. Max


PLTYEL

80020

Platoon Yellow
The yellow that precedes RED
whenever the Vehicles/Green
(PSEL) is 2 or more.

1.0 sec min; 6.0 sec max

LNGYEL

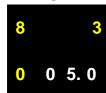

LONG YELLOW

The safety yellow whenever GREEN time is more than 7 sec.

3.0 sec min; 6.0 sec max

FYELL

840000

FIRST YELLOW
The very first Yellow after First

Ignored in this version

Green

QTHRS

80032

Q1 THRESHOLD

The threshold level for Q1 to be activiated

MXGRNA


80050

MAXIMUM GREEN A
The maximum time for Green
under plan 'A'


MXGRNB

8 7 0 0 0.0 MAXIMUM GREEN B
The maximum time for Green under plan 'B'


SATMS-3 Ram Map – Column 8 (cont'd)

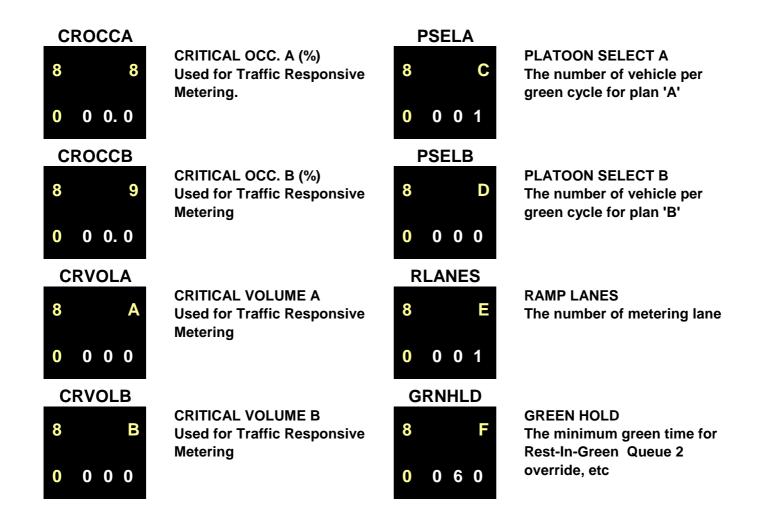


SATMS-3 Ram Map – Column 9

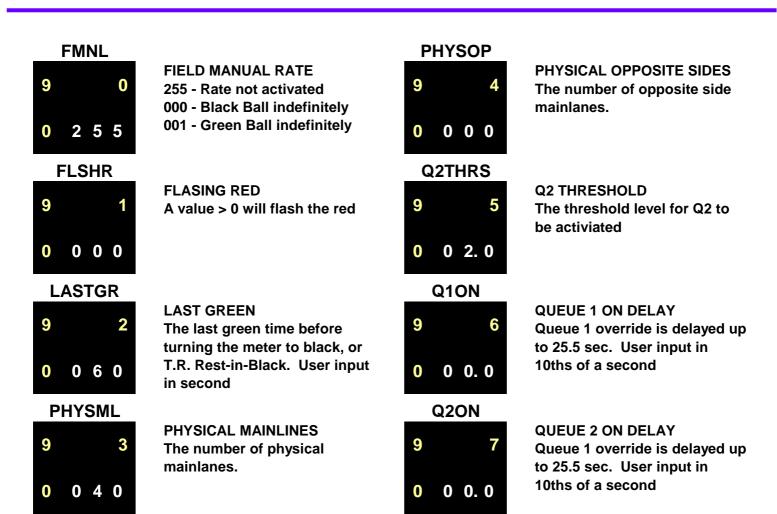

SATMS-3 Ram Map – Column 9 (cont'd)

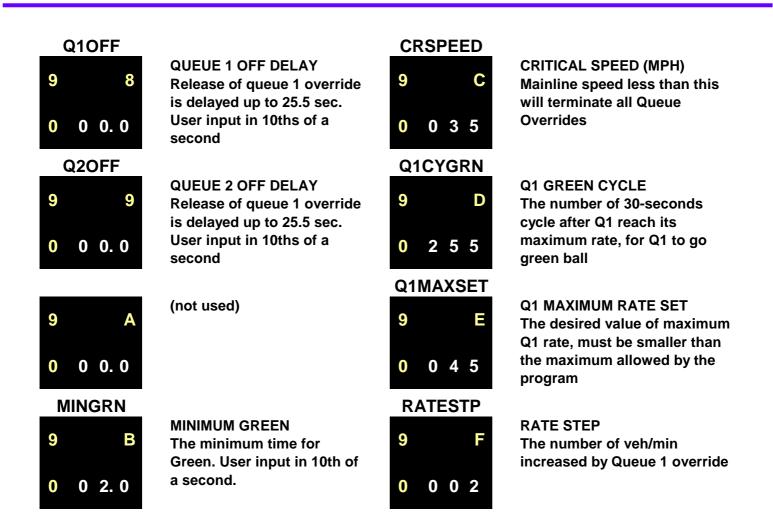

SATMS-3 Column 'F'

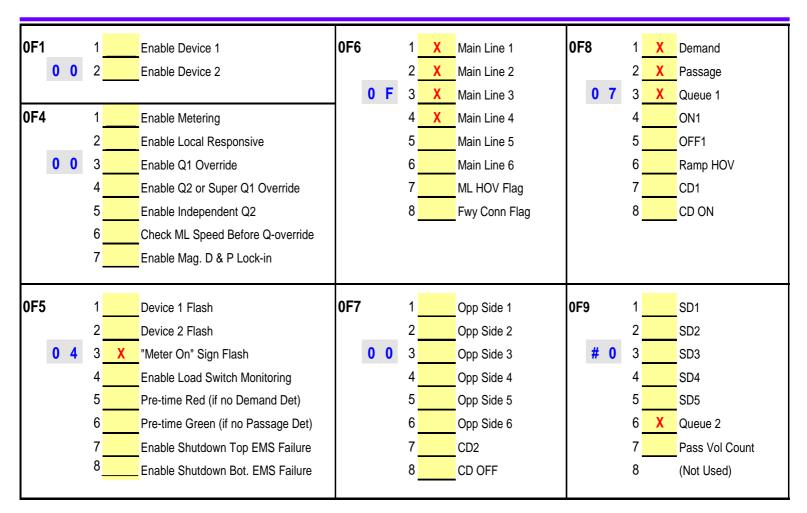

Top Left Segment

- No queues activated
- 1 Q1 is activated
- 2 Q2 is activated
- 3 Both Q1 and Q2 are activated
- 4 Green Hold is is effect
- F False state: Q2 is activated without Q1 activated first





Top Right Segment

- b Metering is disabled
- 1 Field Manual Rate is in effect
- 2 SWARM rate is in effect
- 5 TRRATE is in effect
- 6 TODRATE is in effect
- A Today is Holiday: No metering

Bottom Left Segment

- A Normal display
- b Metering shutdown due to bad load switch
- C Warning: current rate is too small
- d Metering shutdown due to 'Prepare To Stop' EMS fails
- E Metering shutdown due to 'Meter On' EMS fails





Bottom Right Segments

xxx Metering Rate

000 Metering is OFF

001 Meter is Rest-in-Green

SATMS-3 Wiring Diagram

